

5 Phase Stepping Motor Driver MC-5514RP/5514RP-3



RoHS


FEATURE

- It is 5 Phase-stepping motor driver of the AC100-115V input.
- Maximum resolution is 1/250 (125,000 pulse per rotation).
- Low vibration drive(Full or Half step). (Except MC-5514RP-3)
- Applies to a wide motor to 0.5A/phase-1.4A/phase.
- I/O uses the connector.

SPECIFICATION


Name	5 phase stepping motor driver
Model	MC-5514RP , MC-5514RP-3
Driving method	Micro step
Input power	AC100~115V ±10% 50/60Hz 3.5A Max.
Drive current	0.5A~1.4A/phase
Division	MC-5514RP 1, 2, 4, 5, 8, 10, 16, 20, 25, 40, 50, 80, 100, 125, 200, 250 MC-5514RP-3 1, 2, 3, 6, 12, 18, 24, 32, 36, 48, 60, 72, 120, 160, 180, 240
Maximum frequency	500 kpps
Input signal	Optical-isolator input [1]:4~8V , [0]:-8~0.5V Input resistance CW, CCW:300Ω C.D, H.O.:390Ω
Output signal (Z.P)	Optical-isolator open collector output Condition : DC30V or less, 50mA or less
Function	Two pulse mode , Micro step angle select , Automatic current reduction
Insulation resistance	The value is 50MΩ or more,that measured by DC500V Megger Between the AC input and the case.
Withstand voltage	It is not above even if AC1500V is impressed between the AC input and the case for one minute.
Operating temperature range	0~40°C
Operating humidity range	0~85%
Weight	750g

SAMPLE WIRING DIAGRAM

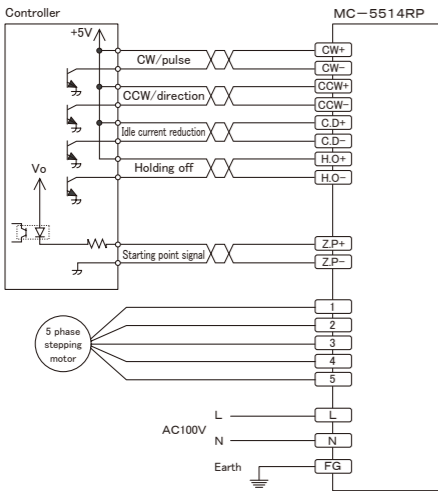

DIMENSIONS (unit:mm)


The size does not contain the projection thing such as the screws.

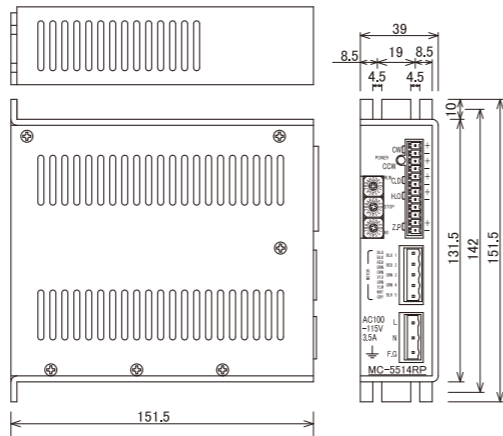

MOTOR

- 5/10 lead 5-Phase stepping motors such as Tamagawa-seiki or Oriental-motor.


See table below for the pin no. of the connector and color of motor leads.

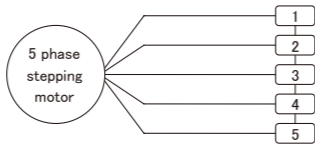


Connector No.	5 lead	10 lead
1	Blue	Blue/Black
2	Red	Red/Blown
3	Orange	Orange/Purple
4	Green	Green/Yellow
5	Black	White/Gray

Note : Please use the wire rod of AWG20(0.5mmsq) or more for connecting the motor.

INPUT/OUTPUT CIRCUIT

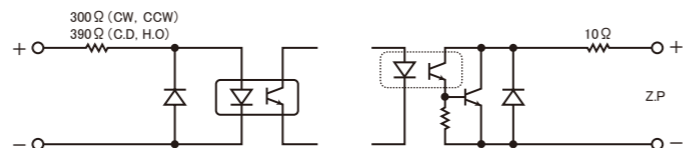

NAME AND FUNCTION

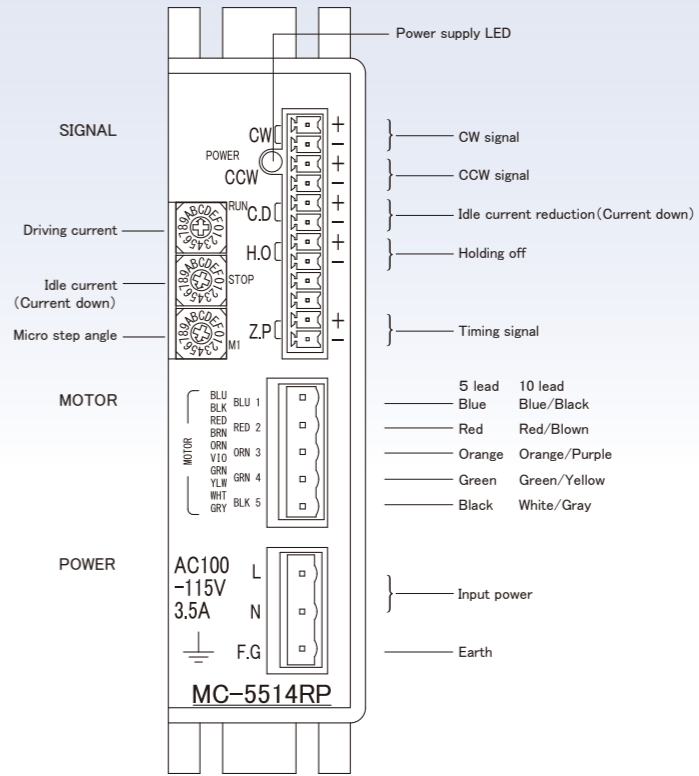

SETTING MICROSTEP RESOLUTION



MC-5514RP

SW No.	0	1	2	3	4	5	6	7	8	9
Division	1	2	4	5	8	10	20	40	80	16
	A	B	C	D	E	F				
	25	50	100	125	200	250				

MC-5514RP-3

SW No.	0	1	2	3	4	5	6	7	8	9
Division	1*	2*	3	6	12	18	24	32	36	48
	A	B	C	D	E	F				
	60	72	120	160	180	240				

Micro Step Angle = $\frac{\text{Base Step Angle}}{\text{Division}}$ 72 divided steps → 0.01 degree
 ※Does not drive at the low vibration in this case.

SETTING DRIVE CURRENT

The desired drive current is obtained by setting RUN SW as follows.



Drive Current (RUN : Rotary Switch)

SW No.	0	1	2	3	4	5	6	7	8	9
Current (A)	0.5	0.58	0.66	0.75	0.81	0.88	0.96	1.03	1.1	1.15
	A	B	C	D	E	F				
	1.25	1.32	1.4	1.47	1.53	1.6				

Example : Drive current = 1.4A/phase.
RUN SW = C

SETTING IDLE CURRENT (CURRENT DOWN)

Idle current is established by setting STOP SW as follows.



Idle Current (STOP : Rotary Switch)

SW No.	0	1	2	3	4	5	6	7	8	9
Current (%)	27	31	36	40	45	50	54	58	62	66
	A	B	C	D	E	F				
	70	74	78	82	86	90				

Example : When the drive current is set at 1.4A/Phase, idle current will be 0.7A/Phase at the switch position no. 5 (50%).